


How to program the E92 – 7 day programmable touch screen thermostat

This keeps you in complete control of your underfloor heating system. This thermostat has state of the art touchscreen technology. This 16amp programmable thermostat has 6 daily settings and can be used as a floor, air or air & floor combined unit. Below we help you to program the thermostat in a straight forward manner and the correct way for how you intend to use it.

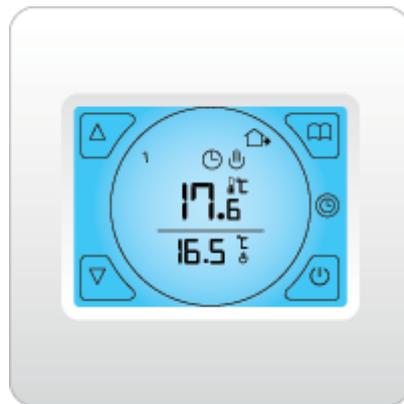

You can set 6 time periods for each day and these are called events, each event can have a different temperature. These instructions are designed specifically to inform you how to use this control for under floor heating purposes. Please note for weekend settings there are only four events per day.

This thermostat if following these instructions is easy to program and can be set for 7-day use, 5 + 2, or 6 + 1 days.

Let's start:

1st: Set the time – Setting the day & Time

- Press and hold the clock ⌚ key until the minutes start to flash. Use the arrows on the left ▲ to increase or ▼ to decrease. Once set press the ⌚ key again.
- Now the hours should be flashing, use the up ▲ and ▼ down keys to enter the correct hour, when correct press the ⌚ key again and the small number to the left of the screen should be flashing (1-Monday, 7-Sunday) Repeat the process pressing the up ▲ and ▼ down arrows to set the correct day.
- When the time and day has been set press the ⌚ button again.
- You have now set the day & time.

2nd – Setting the main menu (advanced settings):

This thermostat is factory set to monitor the air temperature.

If using your underfloor heating as the only form of heating in the room, without any radiators this is OK. If using just as a floor warming product or if using UFH with wooden floors, you need to change this setting.

So before you start to program the on/off times you need to enter the advanced settings (ADJ) program.

Here you can also adjust the programmer to work on a 5 & 2 day schedule, 6 & 1 or have the same for 7 days.

1. Turn your thermostat off with the button in the bottom right hand corner.
2. When off press and hold the on/off button and the  (Menu) button at the same time.
3. Now release your fingers and this will give you advanced settings and 1ADJ should show on the screen. Press  again and 2SEN should show.
4. If using as a tile heating product only, Press the arrow  button until it says "OUT" (may look like OUR) on the screen. The floor sensor is now activated.
5. Now Press  4 more times and 6PRG will show. Now you can adjust the programme schedule for the program of days you wish the heating to work, with the  button. If this is set to "off" the programmer cannot be used. Choose the combination that is best for you.
6. When set Press the on/off button to come out.
7. All of the other advanced settings can be ignored as this thermostat is multi- functional and many menu options are not applicable.
8. Now turn the thermostat off.
9. Now turn it on again to set your on/off times.

3rd Now program the time the heating comes on & turns off

Hold the  key for 5 seconds until the days of the week are showing on the screen.

- Set event 1, (sun symbol) by using the arrow keys to alter the time as before and set the time you want the heating to come on (set an hour before you plan to use the floor). Now press 
- Now set the temp you want the tiles to be (25-28⁰c) & press 
- Now set the time you want the heating turned off & press 
- Now set the off temperature (11-15⁰c) & press 
- Now set the time you want the heating on for lunch & press 
- Now set the temp you want the tiles to be (25-28⁰c) & press 
- Now set the time you want the heating turned off & press 
- Now set the off temperature (11-15⁰c) & press set
- Now set the time you want the heating on for the evening & press 
- Now set the temp you want the tiles to be (25-28⁰c) & press 
- Now set the time you want the heating turned off & press 
- Now set the off temperature for the night (11-15⁰c) & press 

N.B. If you have the programmer set at a 5-2 or 6-1 day schedule you will set different times for the weekend.

Once you are happy with the settings press on/off to return. To activate the timer you must have the  symbol showing above the current temperature on the display.

Turning the thermostat on or off

- Press the on/off key to switch the thermostat on or off.
- The time and the set temperature will show simultaneously at the bottom of the screen and the current temperature will show above it.

Key-lock function

Press both the up & down arrow keys for 5 seconds to lock or unlock the control.