



Welcome

Thank you for your purchase.

Your new thermostat will provide uniform and comfortable temperature control throughout every room in your property. We bring together technology, craftsmanship and the highest quality materials to provide you with a safe, reliable product combined with sleek, contemporary design.

please read this installation/programming manual for comprehensive instructions on installing and operating your thermostat. Please also ensure a suitably qualified person installs your thermostat and complies with all local regulations.

In the box you will find

Thermostat	1pc	Screws	2pc
User Guide	1pc	Floor Sensor (2.5m)	1pc
QC Passed	1pc	(Floor Sensor is Optional)	

ABOUT YOUR THERMOSTATS

The BHT-8000 range has been developed to control electric underfloor ,water heating or water/gas boiler systems.These units are designed for use in commercial, industrial,civil and domestic properties

MODEL DEFINITION

- GA: Water heating, 5A
 - GB: Electric floor Heating, 16A
 - GC: Water/Gas Boiler, 5A
 - L: Backlight
 - P: Weekly Programmable
 - N: Modbus Communication
 - W: Wifi
 - S2: Both internal sensor and floor external sensor
- For example: BHT-8000 GCLW**

FEATURES

On Appearance

1. Negative black seen will bring you to a secret world.
2. 4.8 inch Large colorfull screen display area, creates your colorful life.
3. Touch buttons to make simple operation.
4. Amazing Silver Frame opens your modern life.
5. The visible thickness above the wall is only 15mm.
6. The snap connection allows you to easily install.
7. 86mm hidden box and European 60mm round box is suitable.
8. White, black or brushed stainless steel for your selection.
9. Wrap-around cooling holes help heat to escape quickly and avoid affecting temperature detection.

On Functionality

1. Powerful functions are available such as WIFI etc..
2. 1 C accuracy keeps temperature within the level you set.
3. C or F can be customized.
4. Data memory when power is off.
5. 5+1+1 six periods programmable maximize comfort and economy.
6. Temporary programmable.
7. All setting languages synchronize your time zone, address and language.
8. No limit to add thermostats in App and support Smart Scene..
9. Create thermostat group to Centralized control.
10. Integrate with Amazon Echo, Google Home, Tmall Genie.
11. Support device sharing.
12. Weather, UV index, humidity display help you decide what to wear today.


TECHNICAL DATA

Power Supply: 95 ~ 240 VAC, 50 ~ 60HZ
 Current Load : Water heating 5A , Electric floor Heating 16A , Water/Gas Boiler 5A


Sensor: NTC3950, 10K
 Accuracy: ±1°C
 Set Temp. Range: 5 -35°C
 Dispal Temp. Range: 5 ~ 99
 Ambient Temp.: 0 ~ 45°C
 Ambient Humidity: 5 ~ 95 % RH (Non Condensing)
 Storage Temp.: -5 ~ 45°C
 Power Consumption: <1.5W
 Timing Error: < 1%

Shell Material: PC +ABS (Fireproof)
 Installation Box: 86 * 86mm Square or European 60mm Round Box
 Wire Terminals: Wire 2 x 1.5 mm2 or 1 x 2.5 mm2
 Protection Class: IP20
 Buttons:Capacitive Touch Buttons

DIMENSION

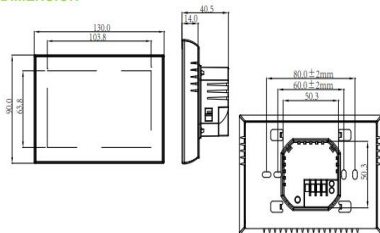

HOME SCREEN QUICK REFERENCE

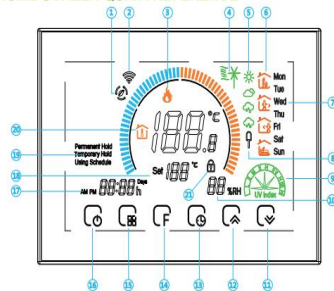

- | | | |
|--------------------|-------------------------|--------------|
| ① Wifi (AP mode) | ⑧ External sensor | ⑮ Mode |
| ② Wifi (EZ mode) | ⑨ Ultraviolet intensity | ⑯ Power |
| ③ Heating on | ⑩ The humidity outdoor | ⑰ Time |
| ④ Wind speed | ⑪ Down Button | ⑱ Set temp. |
| ⑤ Weather | ⑫ Up Button | ⑲ Menu |
| ⑥ Periods | ⑬ Clock | ⑳ Room Temp. |
| ⑦ Monday to Sunday | ⑭ Advanced options | ㉑ Lock |

1. The displayed humidity, weather, and ultraviolet are outdoor data;
2. The data of the weather station is pushed 3-4 minutes after being connected to the Internet, and updated every half an hour;


BEFORE WIRING AND INSTALLING

1. Read these instructions carefully. Failure to follow them could damage the product or cause a hazardous condition.
2. Check the ratings given in the instructions and on the product to make sure the product is suitable for your application.
3. Installer must be a trained, experienced service technician.
4. After installation is complete, check out product operation as provided in these instructions.

CAUTION

Electrical Shock or Equipment Damage Hazard. Can shock individuals or short equipment circuitry.
 Disconnect power supply before installation.


WIRING

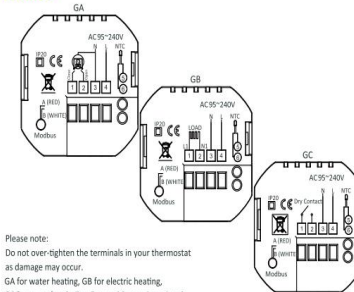


Please note:
 Do not over-tighten the terminals in your thermostat as damage may occur.
 GA for water heating, GB for electric heating,
 GC for water/gas boiler. External Sensor is optional.

INSTALLATION


Your thermostat is suitable for installation within a standard 86mm pattress box or European 60mm pattress box.
 Step 1. Keep power off. See Fig 1.
 Step 2. Remove the mounting Plate by rotating the LCD part. See Fig 2.

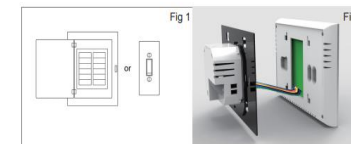

- Step 3. Connect power supply, load into the appropriate terminals. (see "Wiring your thermostat" for details and Fig 3).
- Step 4. Fix the mounting plate into the wall with screws in

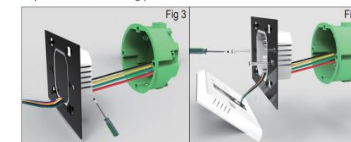

- Step 5. Fasten body of thermostat and the mounting plate through rotating. See Fig 5.
- Step 6. Installation complete. See Fig 6.

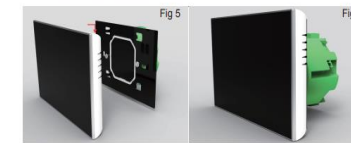

OPERATION

During Power On

1. **Power On/off:** Press to turn the thermostat on/off.
2. **Manual & Programmable**
 Press to set the Permanent Hold, Temporary Hold, Using Schedule, These functions will appear on the screen.
 Permanent Hold - Manual. In this mode, Press / to set temperature. Temporary Hold. During Using Schedule or in this mode, Touch / to set the temporary temp.. It will be valid till the start time of the next scheduled period.
 Using Schedule. 7 days a week, 6 periods programmable daily.
3. **Adjusting/Setting the Clock**
 Press till the min of time will flashes;
 Touch the icon / to set your minute.
 Then press , the hour of time will flash; Touch the icon / to set your hour.
 Then press , the week of time will flash; Touch the icon / to set your week.
4. **Locking your Thermostat**
 Press and hold the and for 5 seconds to lock/unlock your thermostat
 In item 3 of high senior options, you can select full lock or half lock.

5.Adjusting/Setting the Programmable Schedules

Press four times in a row. (You can see Mon and).
 Press until the weekday schedule settings appear (1 2 3 4 5 will show along the right the screen)
 Use the / arrows to adjust the on time.
 Press the icon and use the / arrows to set the off time (2nd period).
 Press the icon and use the / arrows to set the temp..
 Repeat this process for periods 3 4 and 5 6.
 Press the icon once more to enter the Saturday schedule settings (6 will show along the top of the screen).
 Repeat the above process to set the period and temp. and Sunday schedule.

Press once more to confirm and exit.
Default settings for program schedule

Time display	WEEKDAY (MONDAY - FRIDAY) (1,2,3,4,5 shows on screen)		WEEKEND (SATURDAY) (6 shows on screen)		WEEKEND (SUNDAY) (7 shows on screen)	
	TIME	TEMPERATURE	TIME	TEMPERATURE	TIME	TEMPERATURE
Period 1	06:00	20 °C	06:00	20 °C	06:00	20 °C
Period 2	08:00	15 °C	08:00	20 °C	08:00	20 °C
Period 3	11:30	15 °C	11:30	20 °C	11:30	20 °C
Period 4	13:30	15 °C	13:30	20 °C	13:30	20 °C
Period 5	17:00	22 °C	17:00	20 °C	17:00	20 °C
Period 6	22:00	15 °C	22:00	15 °C	22:00	15 °C

A separate schedule may be set for weekdays (Mon - Fri) and for weekends (Sat or Sun).

6.Checking the Temperature of Floor Sensor

Press and hold the arrow for 5 seconds to display the temp. of floor sensor.

7.Setting the Functions and Options

Press and hold for 5 sec. in the order to reach system function. Then press to scroll through the available functions , and use the / arrows to change the available options. All settings are confirmed automatically.

Code	Function	Setting and options	Default
1	Temperature compensation	-9 to 9 °C	-3
2	Deadzone Temp	1-5 °C	01
3	Time Display	00:12h 01:24h	01
4	Button Locking	00:All buttons are locked except power button 01:All buttons are locked	01
5	Sensor types	In:Internal Sensor(to control the temp.) Ou:External Sensor(to control the temp.) AL:Internal/External Sensor (Internal sensor to control the temp., external sensor to limit the temp.)	AL
6	Min.Set Temp	5-15 °C	5
7	Max.Set Temp	5-45 °C	35
8	Standby Brightness	3-99	4
9	Energy saving Mode	00:Energy saving Mode 01:Non-energy saving Mode	00
A	Energy saving Temp	0-30 °C	20
B	High temperature protection setting	25-70 °C	45
C	Low temperature protection setting	0-10 °C	0

ABOUT WIFI

WI-FI CONNECTION

Before using your Wi-Fi thermostat for the first time, you must configure the Wi-Fi signal and settings through your smartphone or tablet. This will allow communication between your connected devices

Step 1 Download your APP (Fig 1-1)



Fig 1-1



Fig 1-2 iOS



Fig 1-3 Android

For iOS devices, search for "Smart Life" in Apple Store and download. Alternatively, scan the relevant QR code here (Fig 1-2).

For Android devices, search for "Smart Life" in Google Play and download. Alternatively, scan the relevant QR code (Fig 1-3).

Step 2 Register your account

Open "Smart Life", you will get a piece of notification (Fig 2-1). Click Allow to go into your page of register (Fig 2-2). Press register and enter your phone no. or email (Fig 2-3) then you can get a verification code. Input your password and confirm (Fig 2-4) to complete your registration. If you have account, please log in.

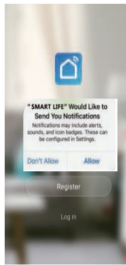


Fig 2-1



Fig 2-2

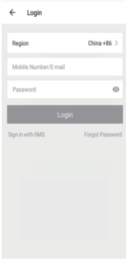


Fig 2-3

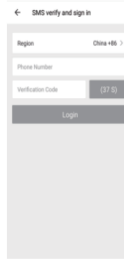


Fig 2-4

Step 3 Connect your Wi-Fi signal

On your thermostat

With power off, press and hold the arrow for eight (8) seconds. The backlight will be on and the icon will flash one time per sec.

Then, go back to the home page of your app

Press the + on the upper right corner of the page (see Fig 3-1-1) to add your device. Click Confirm indicator rapidly blink (Fig 3-2) then select your network and back to your app to enter the password of your wireless router (Fig 3-3) and confirm. The app will connect automatically (Fig 3-4). This may typically take up to 5~90 seconds to complete. Your room name could be edited when the device is connected (Fig 4-4).

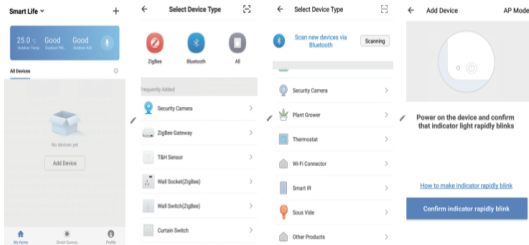


Fig 3-1-1

Fig 3-1-2

Fig 3-1-3

Fig 3-2



Fig 3-3

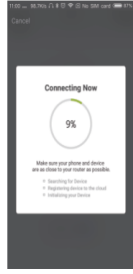


Fig 3-4

This is EZ mode which provides fast network connection between your app and your device. If your router doesn't support it or your wifi

If you have connected your thermostat successfully, please ignore the AP setting as below.

On your thermostat

With power off, press and hold the arrow for eight (8) seconds. The backlight will be on and the icon will flash one time per sec. Press and hold the arrow for eight (8) seconds again. The icon will flash one time every (3) seconds.

Then, go back to the home page of your app

Click Confirm indicator slowly blink (Fig 4-1) then select your network and back to your app to enter the password of your wireless router (Fig 3-3) and confirm. The app will go into the page in Fig 4-2.

Press **Connect now** to select the wifi signal SmartLife-XXXX of your thermostat (Fig 4-3). Go back to your app and click **Connect now** then the app will connect automatically (Fig 3-4).

This may typically take up to 5~90 seconds to complete.

Your room name could be edited when the device is connected (Fig 4-4).



Fig 4-1



Fig 4-2



Fig 4-3

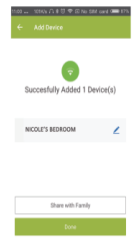


Fig 4-4

PROGRAMMING YOUR THERMOSTAT

When your room is established successfully, it will display on the home screen (Fig 5-1). The round button is to turn on/off your room. Click the line into beginning programming your thermostat.

1. Power on/off button, press it, turn on the device, press it again, turn off the device
2. Lock/Unlock button. If button is green, the screen is "Locked", if button is grey, the screen is "Unlocked".
3. Economy button, in this mode, the temperature will be kept 20 degree. This temperature cannot be changed or adjusted.
4. Manual button: In this mode, your heating can be set manually (ie. Not using the pre-programmed settings)
5. Program button. When this button shows, your thermostat is in program mode and will follow any pre-set heating schedule. When in Manual mode, press the button to select mode and vice-versa.

* Slide the yellow button backwards or forwards to manually adjust the temperature, the temperature will show in the centre

of the page. After a few seconds the current room temperature will show.

* When in Program mode, click on the schedule setting (at the bottom of the page) to be taken to the schedule page (See Fig 5-2) where you can simply click on the working days (Mon-Fri) and then the time/Temp. to adjust to your preferred schedule.

* You can set 6 periods - time and temp. (Fig 5-3)

* Repeat the above after clicking on the Weekend (Sat-Sun) settings at the top of the page

* Once your schedule has been set, click on SAVE and the app will send the programming to your thermostat and confirm the schedule has been saved.

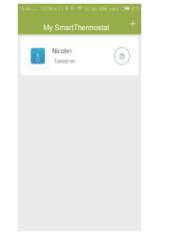


Fig 5-1

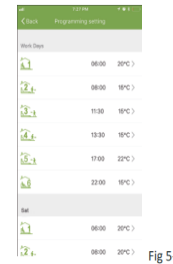


Fig 5-3



Fig 5-2

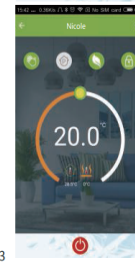


Fig 5-4

How to create a group?

Press the menu button in the red circle (Fig 5-2) then click **Create group** (Fig 6-1). Select all the rooms you want and confirm.

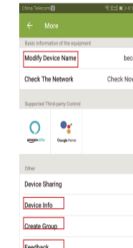


Fig 6-1

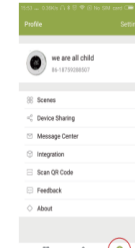


Fig 6-2

The one who create this group can control all the rooms at the same time.

Note

Except create the group, in this menu page, you can also modify your device name, share your device, get the information of your device.

How to share your device with your family member?
Way 1: Mentioned in the above.

Way 2: Click your Profile at the right bottom of your main page (Fig 6-2). Select Device Sharing then add the account you want to share.

You can see the sharing account you have sent and the device you have shared in this sharing page.

You don't need to do anything if you are the one shared.

You can add as many as rooms you want.

How to connect your device to Amazon Echo or Google Home?

In your profile, click **Integration** into the using page. Press **Use Now >** (Fig 7-1) for your Amazon Echo or Google Home or Tmall Genie then you can see the operation steps.

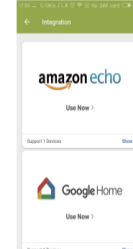


Fig 7-1

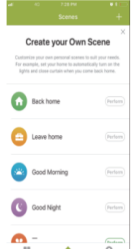


Fig 7-2

What is your Smart Scene and How to use it?

Customize your own personal scenes to suit your needs. For example, set your home to automatically turn on thermostat on when you back home (Fig 7-2). Press + button into the setting
Step 1: You can set a condition for Task like Temperature below 20 degree, then click Save. (Condition: Temp., Humidity, Wether, PM2.5, Air Quality, Sunrise/Sunset, Device)

Step 2: Add a task. Press + to select Device (Power, Set Temp, Lock Mode) to act, then Save. If you want to delete the scene, you can press Delete in the end.

NOTE: The room sound could be turned on/off in PROFILE-SETTING-SOUND. The sound is matched with the default of your system.

SIMPLE EXCEPTION HANDLING

No.	Phenomenons	Handling
1	Power is on but without display.	* Check if the terminals between LCD panel and Power Unit Box is loosed.
2	Without output but display works.	* Use a new LCD panel or new Power Unit Box to replace the old one.
3	Room Temp. is a little different from the actual.	* Do temperature calibration in item 1 of high senior options

SERVICE

Your thermostat carries an 24 months warranty from date of purchase. Service outwith the warranty period may incur a charge. More detail please contact with us directly.